


NOBLE MEDICAL, INC.

INSTRUCTIONS FOR SINGLE AND MULTI-DRUG TEST DEVICE


ONE

Place test device on flat surface.
Transfer 3 drops of urine into
each specimen well.

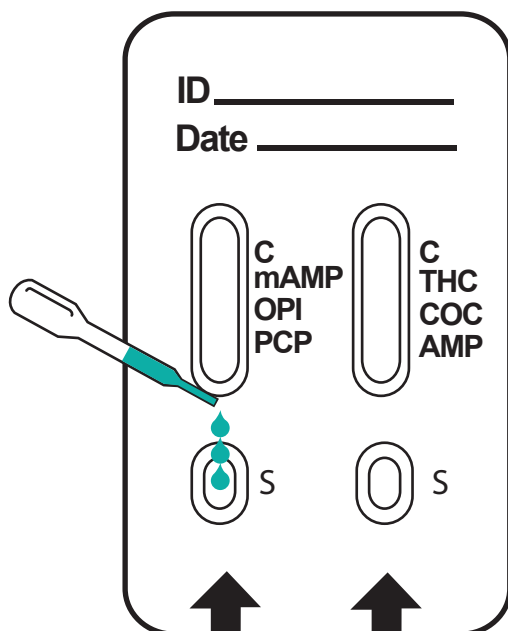


TWO

Wait for the colored lines(s) to
appear. The results should be read
at 5 minutes.

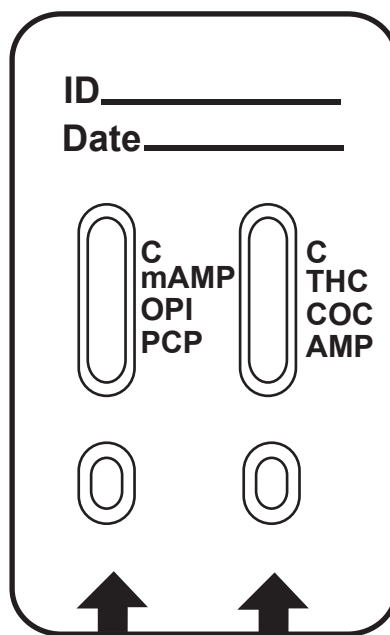

THREE

All positive results are presump-
tive and should be confirmed by
an alternative method (e. g.
GC/MS)

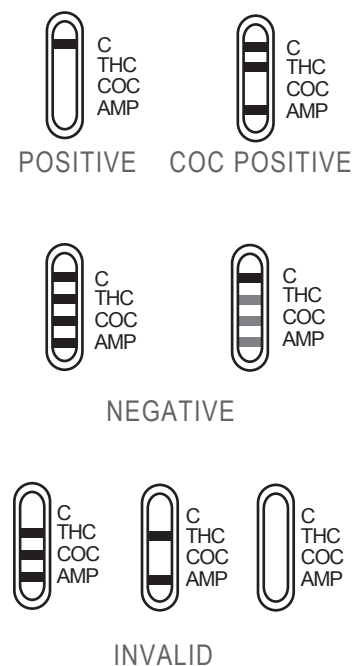

www.noblemedical.com
(877) 836-5713

FDA
Approved